Decorative Panel and Cleaning Instruction For Designer Windows and Doors

Installation Instruction

Designer Series® Windows and Doors 3/2005-Current

Related documents needed to complete this installation instruction:

[1] Hinged glass panel, Grille, Blind and Shade Instructions, included in the package.

Note: When storing the decorative panels, keep the panel as flat as possible with the middle of the panel supported to help prevent bowing.


1 Installation:


A. For 1/8" thick panels taller than 47-1/2", remove the plastic bag containing 1" long panel insert segments from the protective film on the surface of the decorative panel.

B. Remove the protective film from both sides of the decorative panel. Begin at the top of the panel, and pull down and away from the panel. Remove the tape or other packing materials from the top mounting channel.


C. Check the top and bottom of the panel to ensure the panel inserts are fully installed. If they are not fully installed, press the inserts onto the decorative panel.


D. For panels with two 1" long panel insert segments included, install one insert per side. Four panel insert segments included, install two inserts per side. For six panel insert segments included, install three inserts per side.

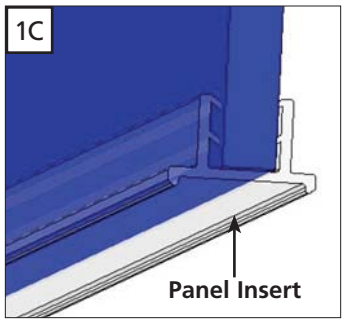

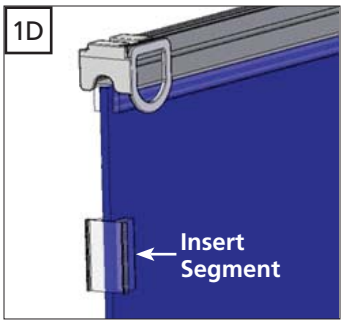

Note: The insert segments should be equally spaced on the height of the decorative panel. Press firmly to install the segments on the panel edge.

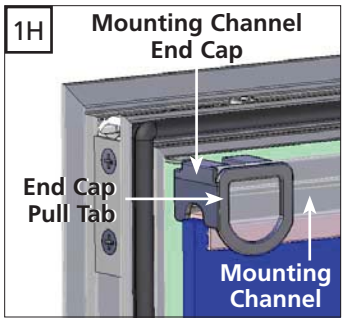

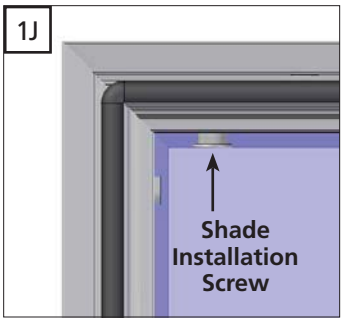

E. Open the hinged glass panel[1].

F. Remove the grille if applicable[1].


G. If there is a blind or shade, remove the blind or shade[1].

H. Grasp the sides of the decorative panel, with the mounting channel at the top. End cap pull tabs should be facing the exterior when installed.

I. Place the bottom of the decorative panel on the bottom rail of the hinged glass panel.

J. Tilt the top of the decorative panel into position, and attach the mounting channel end caps onto the shade installation screws that are located in the top rail of the hinged glass panel.

K. Push the support clip(s) (located on the mounting channel) onto the top rail of the hinged glass panel. If there will be a grille installed on the hinged glass panel, position the support clip to one side of the hatched mark on the edge of the top of the hinged glass panel. The hatched mark is the location of one of the grille clips.

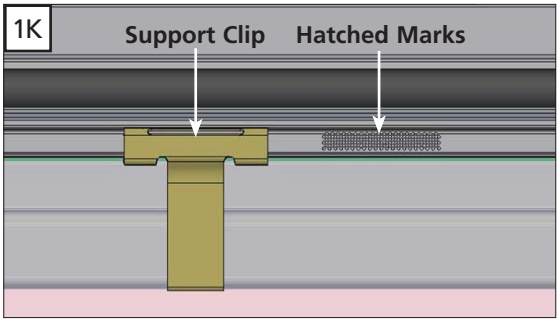

Note: There will be up to two (2) support clips depending on the width of the decorative panel. Some units may not have a support clip. Where applicable, push the support clip(s) onto the mounting channel.

L. Install the grille onto the hinged glass panel (if applicable)[1].

M. Close and latch the hinged glass panel[1].

© Pella Corporation 2006

Rev. 06/23/06 **Part Number: 80HZ0001**


2 Removal:

A. Open the hinged glass panel[1].

B. Remove the Grille[1].


C. Ensure the bottom of the decorative panel is setting on the bottom rail of the hinged glass panel.

D. Release the support clip that is located toward the center of the mounting channel.

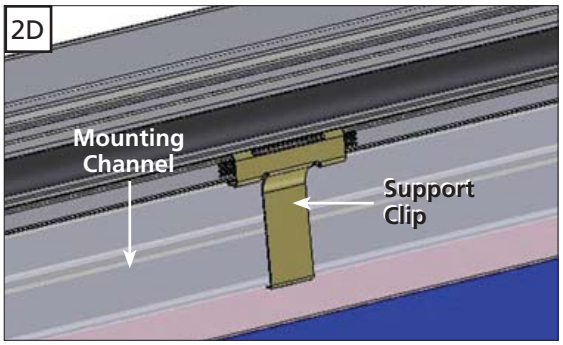

E. Grasp the end cap pull tabs that are located at each end of the mounting channel, and pull both end cap pull tabs straight away from the hinged glass panel top rail.

F. Tilt the top of the decorative panel away from the hinged glass panel, and grasp the sides of the decorative panel below the mounting channel.

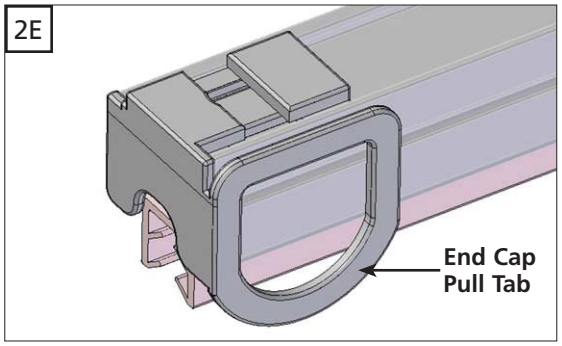

Note: **DO NOT** carry the decorative panel by the mounting channel or the end cap pull tabs.

G. Install the grille if applicable[1].

H. Close and latch the hinged glass panel[1] .

3 Cleaning Instructions:

A. Clean the decorative panels in a reasonably cool, dry place. **DO NOT** clean in hot sun or in rooms where the temperature is above 80 degrees (F).

B. Wipe the decorative panel with a damp cloth and lukewarm water. **DO NOT** allow panels to soak in water.

C. Remove dust and dirt using a solution of mild soap and water with a soft cloth or sponge. A 50:50 solution of isopropyl alcohol and water may also be used.

Note: **DO NOT** use petroleum, alkaline/acidic based cleaners or cleaners with abrasive materials in them ie. "SoftScrub". These materials may damage or scratch the decorative panel.

D. Use a soft, damp cloth and **BLOT** dry. Rubbing with a dry cloth may scratch the material. **DO NOT** use scrapers or squeegees.