Front Door Fixed Edge Filler

SERVICE INSTRUCTION

These instructions apply to:

Pella® Front Doors – Clad Wood (CIS08) 2026 - Current

Tools Required:

- Flat head screwdriver
- Nail gun and finish nails

Part	Description	QTY
	Fixed edge filler	1
	Eurogroove foam seal	1

1 Fixed Edge Filler Removal:

A. **Use a flathead screwdriver** to pry the fixed panel filler out of the Eurogroove. Remove the fixed panel filler from the panel.





B. **Remove the foam seal** from the Eurogroove on the panel.






© 2026


2 Fixed Edge Filler Installation:

A **Remove the adhesive backer from the foam seal.** Position the foam in the center of the Eurogroove and 1-5/16" up from the bottom of the panel. Once positioned, press the foam into place to adhere it to the panel.



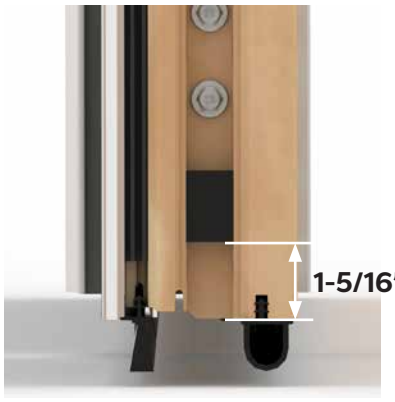

B. **Position the wood panel filler** in the center of the Eurogroove and flush to the bottom of the panel.

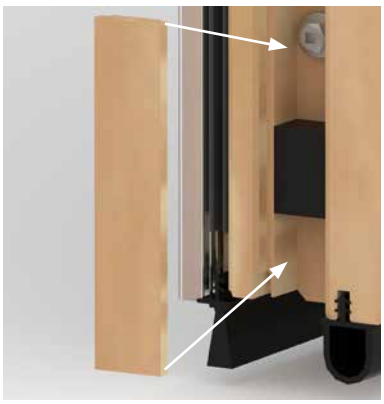



C. **Once positioned use finish nails** to secure the wood panel filler in place. The nails should be positioned 1" from each end of the wood filler.

Note: Make sure finish nails do not interfere with any screw holes.

