In-Swing Entry Door Sidelights Rainscreen Replacement

Service Instruction


These instructions apply to:


Architect Series® Entry Door 07/2011-10/2016
Pella® Entry Doors 07/2011-10/2016

Tools Required:

- Stiff-bladed putty knife

NOTE: This instruction demonstrates removing the rainscreen with the flexible fin and flexible leg and replacing with the new rainscreen with bristle strip, rigid leg, and end notches.

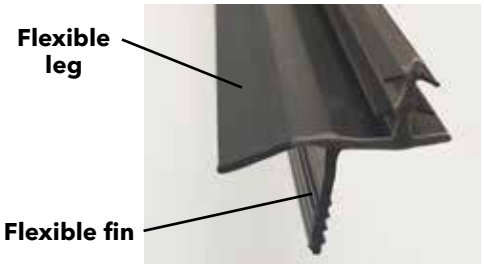

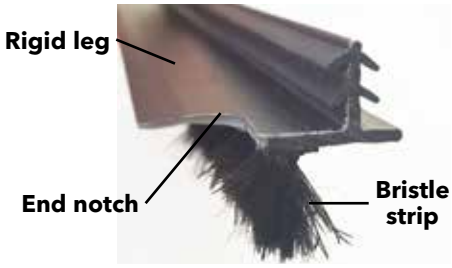

1 Rainscreen Removal:

A. Pull fin over sill wall using a hook, curved tool, or putty knife.



B. Use a putty knife to pry the rainscreen out of the panel kerf.



C. Pinch the flexible fin and flexible leg together and pull rainscreen out from sill area.





© 2016 Pella Corporation

Part Number: 81XR0000

2 Rainscreen Installation:

A. Hold the rainscreen with the bristle strip down and insert left end of rainscreen into space behind left jamb. Keep pressure toward the left jamb while pulling the center of the rainscreen out. This will create a bend in the rainscreen.





B. Bend the rainscreen just enough to get the right end of the rainscreen to fit behind the right jamb.



C. Tuck the bristle strip behind the sill wall with a putty knife.




D. Make sure rainscreen is centered. Seat the rainscreen stem and barbs into the kerf using fingers or a putty knife.



2 Rainscreen Installation (Continued):

E. Recheck bristle strip and tuck bristles behind sill wall.

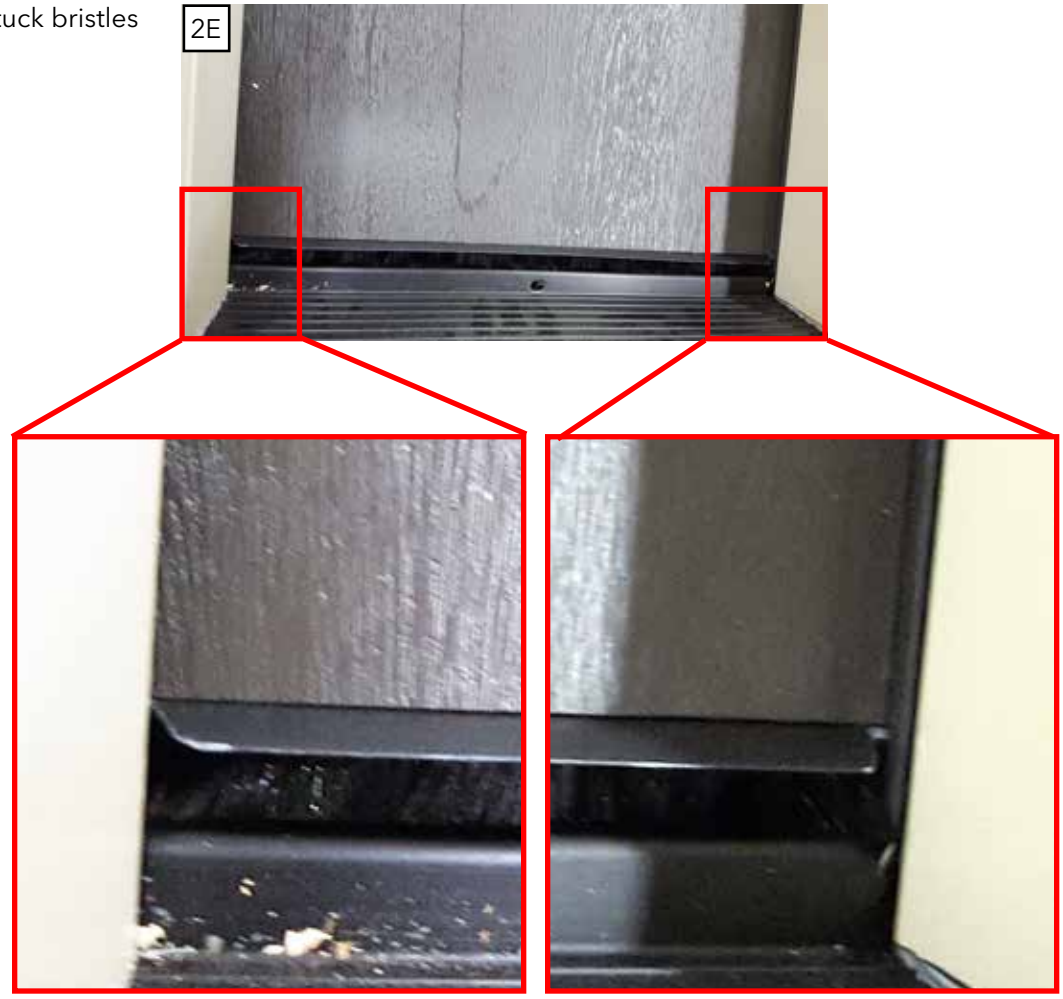

The boxes show the rainscreen properly installed with the notched ends tucked behind the jambs.