SERVICE INSTRUCTION

Patio Door Heavy Duty Screen Mohair Weatherstrip Replacement

These instructions apply to:

Pella® 150 Series 02/2020 - Current
Centera by Pella™ 02/2007 - 02/2012
ThermaStar by Pella® 2003 - 03/2021
Encompass by Pella™ 02/2008 - Current

Tools Required:

- Phillips-head screwdriver
- Utility knife

Supplies Needed:

- Replacement weatherstrip

1 Removing the Screen:

A. Unlatch and slide the screen open.

B. Locate the four roller adjustment screws, one near each corner on the screen frame jambs. Turn each screw counter-clockwise to back it out and release tension on the roller.

1B



C. Lift the screen up and pull the bottom of the screen toward the exterior until the bottom rollers clear the frame sill. Remove the screen from the top of the frame and set the screen in a safe location with the screen mohair facing up.


1C



2 Replacing the Screen Mohair:

A. On the stile containing the mohair; gently bend the rail away from the stile to slightly open the corner miter exposing the edge of the stile mohair channel.

2A

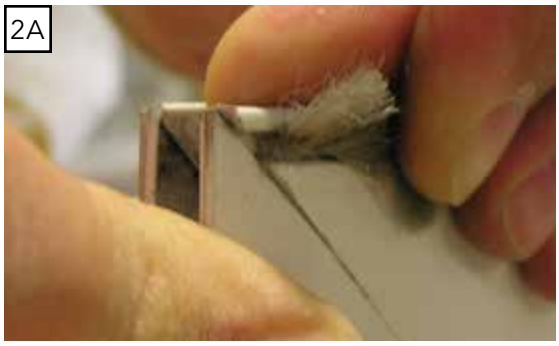

©2021 Pella Corporation

2 Replacing the Screen Mohair (Continued):

B. Pull the mohair out of the channel.

C. Using the original mohair as a guide, trim the replacement to the correct length.



D. While keeping the stile mohair channel exposed, slide the replacement mohair into the channel.





E. Close the miter by gently bending the rail into its original position.

F. Reinstall the screen performing steps 1A – 1C in reverse order. Adjust the screen rollers as necessary.