Sliding Patio Door Roller Replacement

SERVICE INSTRUCTION

These instructions apply to:

Vinyl Sliding Patio Door 05/2024 - Current
Vinyl Multi-Slide Patio Door 05/2024 - Current

Tools Required:

- Putty knife
- Suction cup
- Large flat-blade screwdriver
- Hammer or mallet
- Phillips screwdriver
- Extra hole plugs

Two or more people may be required for the following instruction.

Note: It is recommended to have extra hole plugs on hand as the hole plugs can be damaged during removal.

1 Panel Removal:

A. Remove the hole plugs using a putty knife.





B. Insert a Phillips screwdriver into each adjustment hole and turn counterclockwise to lower the panel to allow the panel to be removed from the frame.

TIP: Use a suction cup to lift the panel to take the weight off the roller while lowering.





© 2026

1 Panel Removal (continued):

C. Use suction cup(s) to lift the panel out from the frame and set it in a location so the roller can be accessed. Larger panels will require two people to maneuver.








2 Roller Replacement:

A. Remove the roller attachment screws.

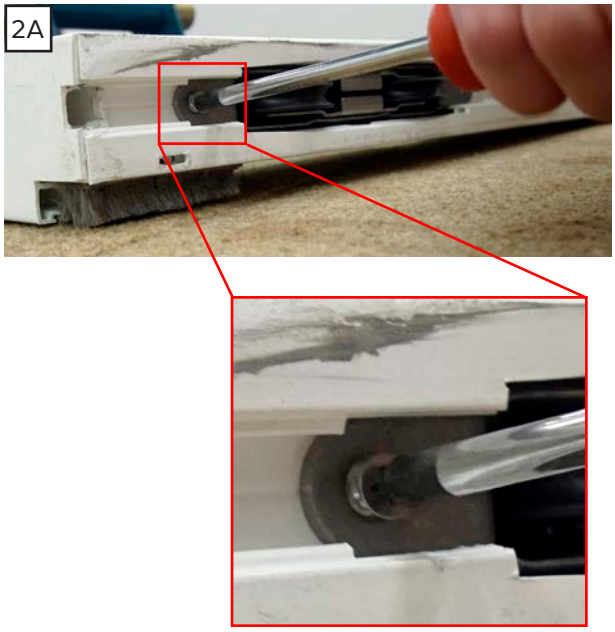



2 Roller Replacement (continued):


B. Remove the roller. If needed use a large flat-blade screwdriver to pry the roller out of the bottom of the panel.







C. Before inserting the roller into the bottom of the panel, make sure the adjustment screw will be aligned with the adjustment hole in the panel.

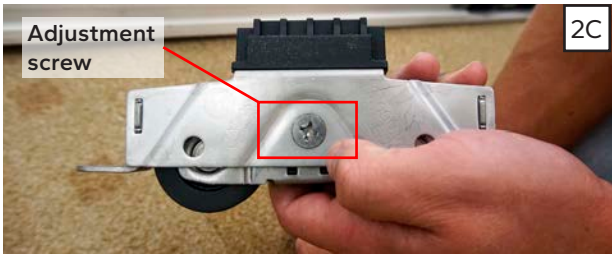

D. Insert the roller into the cut out in the bottom of the panel.





E. If needed, tap the roller into place.





2 Roller Replacement (continued):

F. Use a handheld screwdriver to insert and tighten the roller attachment screws.







3 Panel Installation:

A. Use suction cup(s) to lift the panel up into the frame. Larger panels will require two people to maneuver.







3 Panel Installation (continued):

B. Confirm the reveal between the panel and the frame is even and the panel rolls properly on the track. If not, use the roller adjustment to adjust the reveal.



C. Insert a Phillips screwdriver into each adjustment hole and turn counterclockwise to lower the panel or clockwise to raise the panel.

TIP: Use a suction cup to lift the panel to take the weight off the roller while lowering. Panel should slide smoothly, but still engage with the weatherstripping.



D. Install the hole plugs.



