

INSTALLATION INSTRUCTION

Sill Adapter for Single-Hung, Fixed and Sliding Windows

Tools and Supplies Required:


- Tape measure
- Side cutters
- Rubber mallet
- Pencil
- Utility knife
- Sill adapter






Note: If installing sill adapter on Single-Hung or Fixed window; Go to Step 2 - Install Sill Adapter.

1 Prepare Sliding Window Sill Adapter:

- A. **Measure and mark for larger weep hole cut-out.** On each end of the sill adapter; mark 2-1/2" from the end and make a rectangle mark aligned with the existing weep hole.

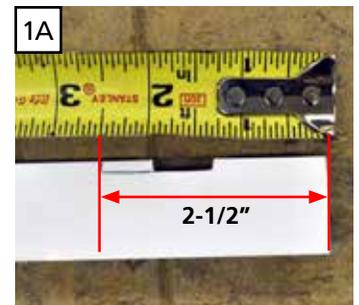

- B. **Cut out larger weep hole.** Use a side cutters and/or a utility knife to cut out the marked area of the sill adapter.

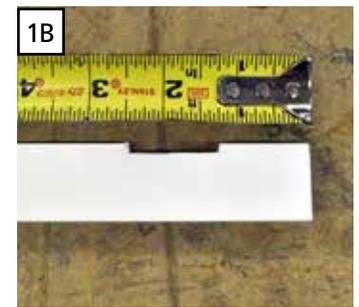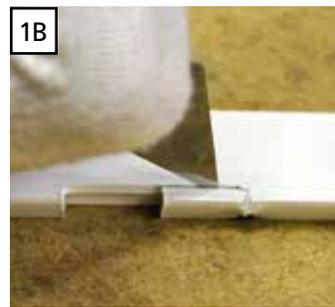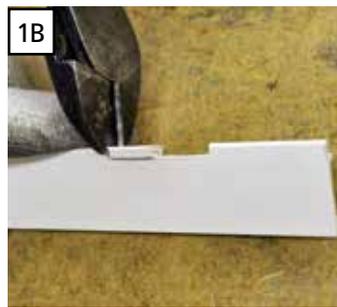

2 Install Sill Adapter:

- A. **Remove excess corner weld flashing.** On each end of the window at the sill, use a utility knife to cut away any excess weld flashing in the accessory groove at the corner.
- B. **Align the sill adapter with the sill,** make sure the barbed leg of the adapter is in the accessory groove.



2 Install Sill Adapter (Continued):

- C. **Seat the sill adapter in the accessory groove.** Use a mallet to tap along the length of the sill adapter to seat it in the accessory groove.

